

# 3D, LEDGESTONE & ROUGH BREAK CORNER PANEL INSTALLATION

1. Corner panels are used to finish outside corners only. Inside corners should be mitered.

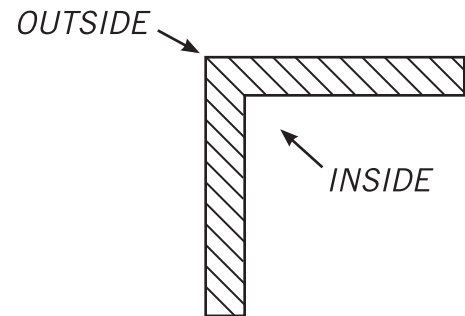


Figure 1

2. Corner panels are double ended and shaped as shown. They are 24" long and 6" high with coverage of approximately 0.9 square feet.

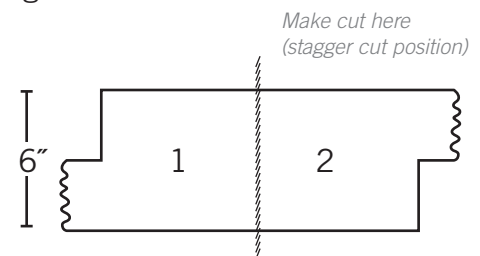


Figure 2

3. Corner panels should be cut into two pieces to desired length and finger joined around the outside corner as shown. Two corner panels are needed to complete one (1) linear foot of outside corner.

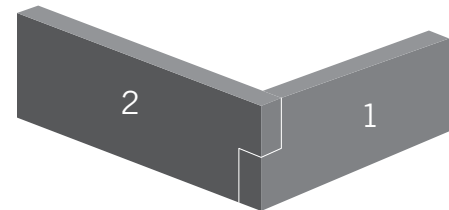


Figure 3

4. Alternate the size of the corner pieces to help stagger the joints. Do not stagger in a brick fashion.

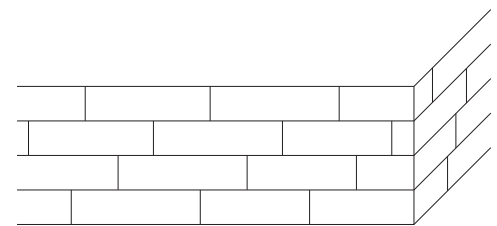


Figure 4